

We have moved - Effective 2/7/04

Combi

Combi USA, Inc.

1962 Hwy 160 W, Ste. 100
Fort Mill, SC 29708

1-800-99-COMBI M-F 8:30am-5pm EST
803-548-3663 FAX

New SC
Sales Tax
is 5%

Manual

Perfect Match™ 6630 Series

Acoustic Canopy Patent Pending

COMBI


Be sure to carefully read this instruction manual **before** using the product to ensure proper use of the stroller, and keep it for future reference. Record the following information for quick reference.

Date Purchased: _____ Model Number: 6630 - _____ Color _____
Located near the rear right leg.


Parts List

Fabric Pattern _____

Make sure you have all the parts listed below before using your stroller. If any parts are missing, call Customer Service at 1-800-992-6624.

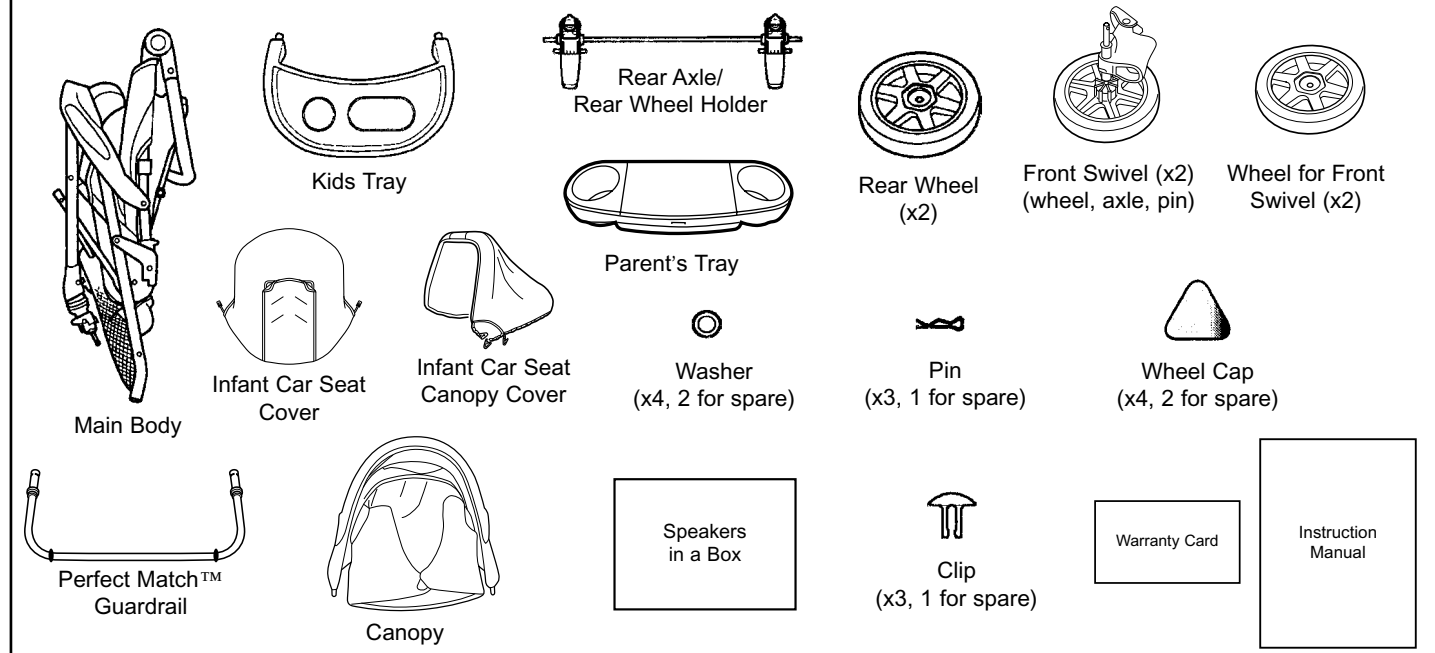

Name of Parts

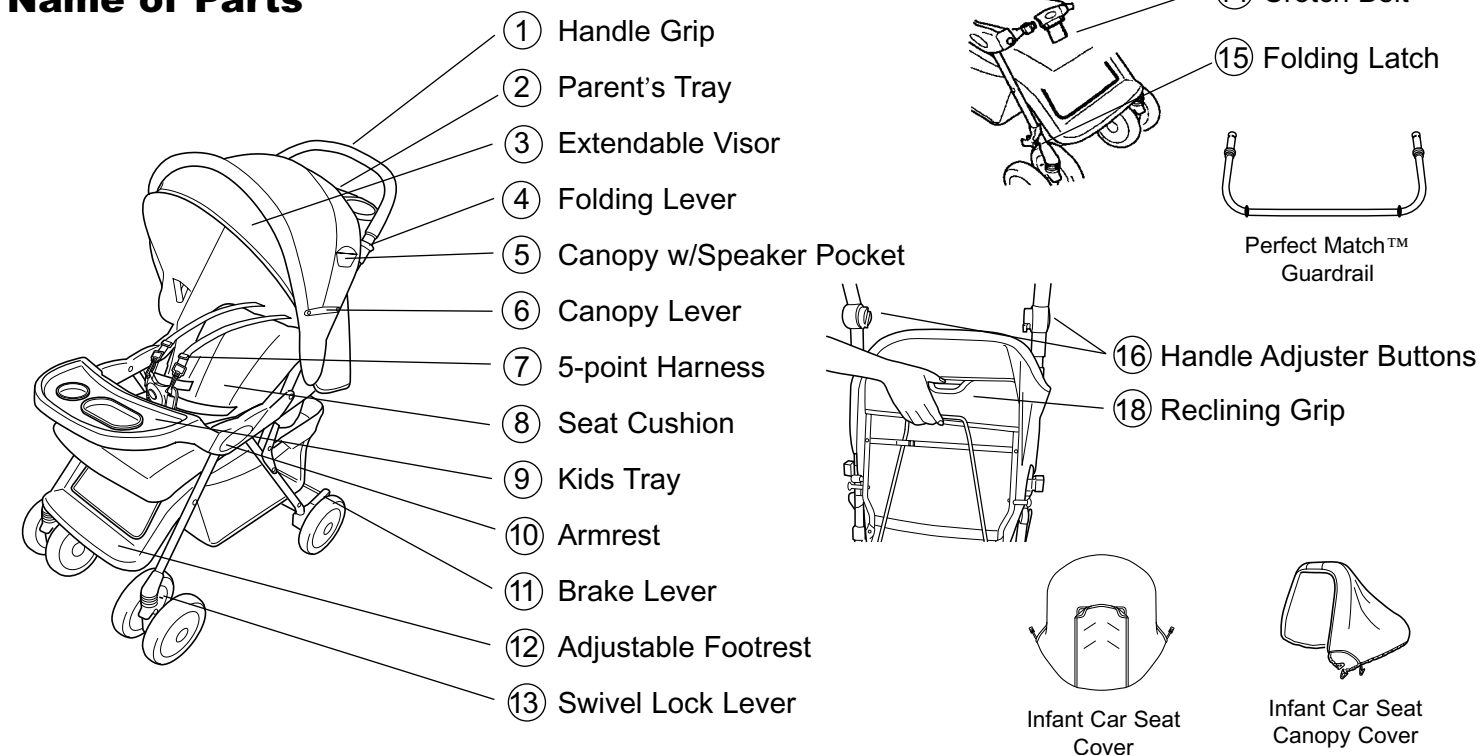

WARNINGS For your child's safety:

If your stroller is not used in compliance with these instructions, serious injury may result.



WARNING

AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT. ALWAYS USE SEAT BELT



WARNING

NEVER LEAVE CHILD UNATTENDED.

*In the event of damage or problems, discontinue use and contact **COMBI Customer Service** for instructions: 1-800-992-6624.*



WARNING

DO NOT LIFT AND CARRY the stroller while open with a child in it. The stroller may slip.



WARNING

Do not use the stroller on steep slopes, stairs, escalators, beaches, rough roads, mud, etc.

WARNING

DO NOT ALLOW CHILD TO LEAN OVER SIDES OF STROLLER. IT MAY BECOME UNBALANCED AND TIP OVER.

WARNING

Excessive weight in basket (or items placed in basket which overflow the top or side of basket) may cause a hazardous condition to exist. Do not load more than 12 lbs. (5.4kg) in the basket.

WARNING

TO AVOID BURNS never put hot liquids in the parent's tray.



WARNING

Do not allow your child to stand in or on the stroller.



WARNING

Do not put or hang things on the canopy or handle because it could cause the stroller to become unbalanced or tip over.

WARNING

Do not place more than 3 lbs. (1.4kg) combined weight in the Parent's Tray (including bottles and contents) to prevent tipping.



WARNING

Never carry more than one child in the stroller. Do not allow a child to ride or sit on areas of stroller other than seat. **Maximum weight of child: 45 lbs. (40 kg)**



WARNING

Always engage both brakes when parking the stroller.

CAUTIONS:

1. Improper usage or lack of knowledge regarding the instructions can result in dangerous situations or personal injury or damage to the stroller.
2. Completely remove all plastic bags and packing materials before using this product to prevent a possible choking hazard.
3. Push the stroller at a normal walking speed only.

Questions or Concerns
check our website:

www.combi-intl.com


COMBI 

- 1 -


Assembling the Stroller

1 Opening the Stroller


1. Unhook manual fold latch located on the side of the stroller.

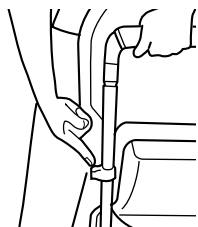


Handle Adjuster Button

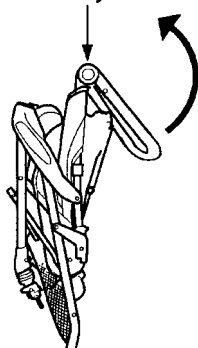

Snap away

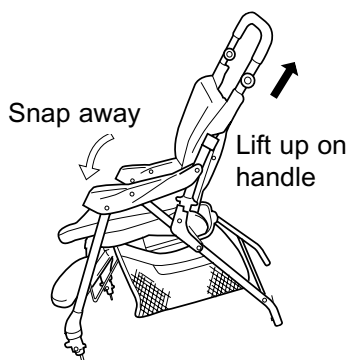

Lift up on handle

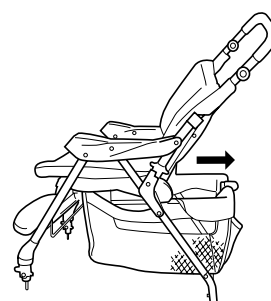

2. Before opening, fully extend the handle by pushing handle adjuster buttons and rotating the handle to upright position.

3. Lift the handle and snap the stroller away from you. It will open and automatically lock into position.

4. Pull the basket frame until it clicks and locks into place.

Note:


The basket locks into a fixed position and is not moveable.

2 Front Swivel Wheels


1. Remove the pin and washer from the end of the exposed axle.
2. Place the wheel on the axle, then place the washer on the axle. Finally, use the pin to hold everything in place.
3. Cover the exposed axle with the wheel cap.

CAUTION


Note the difference between the front and rear wheels.

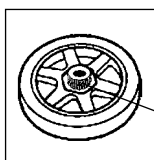

Front Wheel has raised center

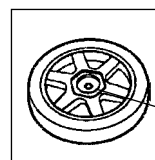


Rear Wheel has flush center

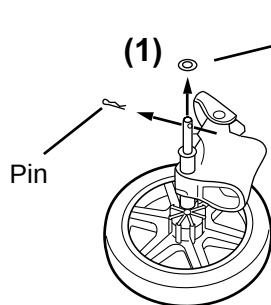

Washers


Pin

(2)

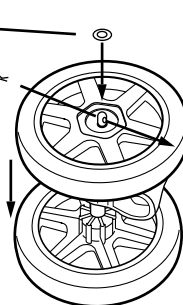


Wheel Cap

(3)

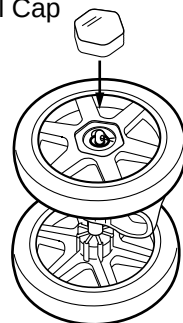


4. Place completed front swivel wheel assembly on the swivel shaft. Be sure the slot in the wheel assembly is facing the front of the stroller.
5. Secure in place by placing the clip in the slot.

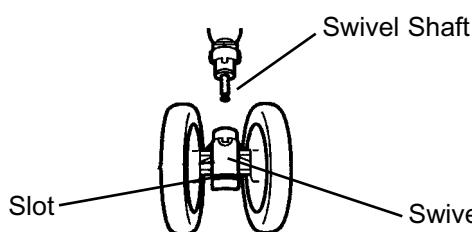

Swivel Shaft

Slot

Swivel Wheel

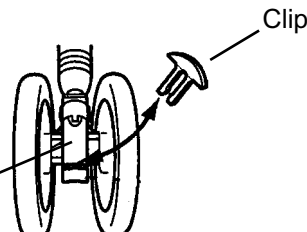

Clip

3 Rear Wheels

1. Place the rear axle and rear wheel holders in front of you with the leg opening facing up and the brake levers toward you. Slide each wheel holder onto the axle.
2. Place each wheel on the axle with the brake projections to the inside.
3. Place a washer on the axle, on the outside of each wheel. (In some instances, more than one washer on each side may be necessary to take up free play. If binding is noted, remove one of the washers.)
4. Push the straight end of the pin through the hole in each end of the axle to lock the wheels and holders in place (See **Figure A**).
5. Cover the exposed axle ends with wheel caps.
6. Lay the stroller on its front with the rear legs up. (See **Figure B**). Slip the rear wheel holders with the brake levers facing up onto the rear legs until they click into place.

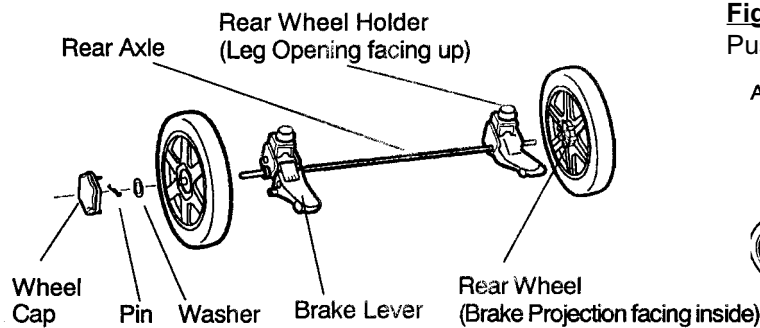


Figure A
Pushing the pin

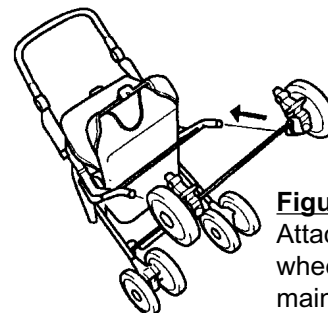
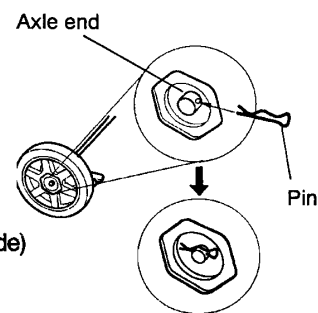



Figure B
Attaching the rear wheel unit to the main body

CAUTION

Failure to fully secure the canopy holders can cause the holders to bend. When storing the stroller by laying it down, be sure the canopy is off the ground to prevent it from bending.

4 Attaching the Canopy

1. Confirm the canopy is facing in the proper direction.
2. Fully insert the canopy holder (male) to the canopy holder (female) until a click is heard.
3. Fasten the velcro located on both sides around the handle.

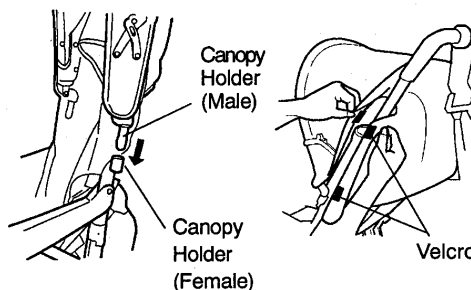


Removing the Canopy



Pull the velcro apart, squeeze the bottom of the canopy holder (male) and pull the canopy off.



Installing the Speakers

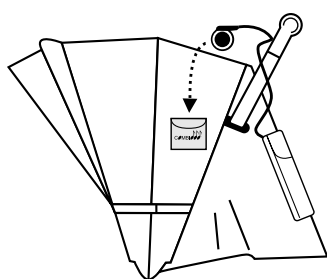

1. The canopy comes with a small pocket on each side. Insert a speaker in each pocket.
2. The canopy has a storage pocket in the back. Place your portable CD, cassette, mini-disc or MP3 player inside the back pocket.
3. Insert the (2.8mm) mini plug into the player. Turn on your player.

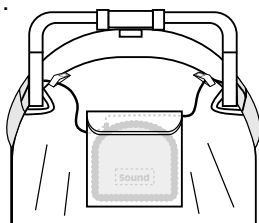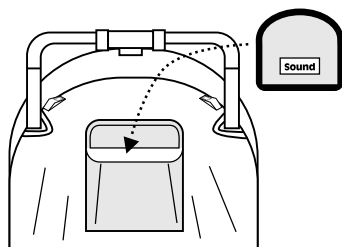

CAUTION

Be sure to test the volume on your player. Set it at a comfortable level so that it does not startle your baby when turning it on. Loud volume can hurt your baby's ears. If you notice that the sound has become weak or distorted or if tracks do not change, this is an indication that your batteries are low. Replace the batteries and set the volume at a comfortable level.

CAUTION

Before folding your stroller, be sure to remove your player from the back pocket of the canopy.

This will make it easier to fold the stroller.

When you fold the stroller, you may leave the speakers in the Acoustic Canopy, but only for short periods of time.

In the summer, the temperature may get as high as 212°F/100°C or more. Do not leave your stroller, with the speakers in the Acoustic Canopy pockets, in your car trunk where the temperature may reach high levels. Store speakers in a cool and dry area.



WARNING:

To avoid serious injury keep stereo speakers and cords out of reach of children.




5 Attaching the Kids Tray




WARNING

Pull on each side of the Kids Tray to make sure that it is completely attached. Do not lift the stroller by the Kids Tray. To avoid burns, do not put bottles/cups with hot liquids.

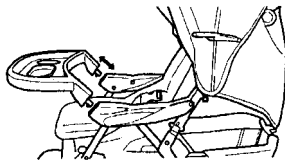

Attaching the Kids Tray

Push the Kids Tray into the openings in the armrest until they lock into place. Check to make sure each side is firmly attached.




Removing the Kids Tray

Press the buttons on the underside of the armrest (as shown) while pulling on the Kids Tray to remove.

Opening the Stroller



1. Before opening, fully extend the handle by pushing handle adjuster buttons and rotating the handle to upright position.

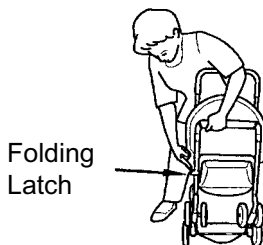


Folding Latch

2. Pull the folding latch to release the lock.



3. Lift the handle and snap the stroller away from you. It will open and automatically lock into position.

Using the Swivel Wheels

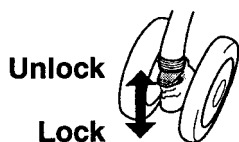


Unlock

Lock

To lock swivels, push both swivel lock levers **down**.

To unlock swivels, lift both swivel lock levers **up**.

Using the Brakes

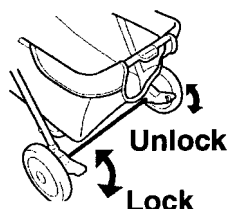

Unlock

Lock

CAUTION

Push the stroller forward to ensure that the brakes are properly engaged.

To lock brakes, push both brake levers **down**.



To unlock brakes, lift both brake levers **up**.

Using the Reclining Backrest



WARNING

Child may slip into leg openings and strangle, never use seat in reclined position unless the permanently attached safety cover is used. To attach the safety cover, see instructions below.

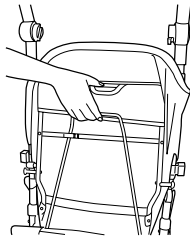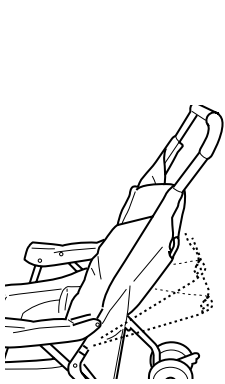

1. While holding the handle, pull up firmly on the reclining grip.
2. Adjust the backrest gently to any of three positions.

To return the backrest to the upright position, simply lift the backrest gently into place.



CAUTION

Be careful when reclining the backrest while baby is in the stroller to prevent abrupt changes in seating position.

Using the Safety Cover

CAUTION

Before folding the stroller, unfasten and store the safety cover under the seat. The stroller will not fold with it attached.

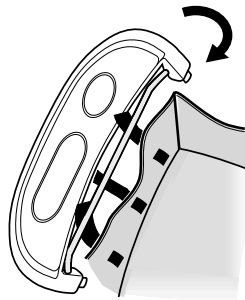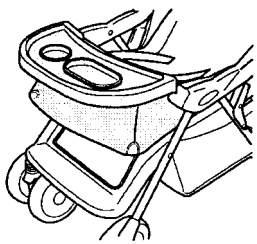


Using the Safety Cover

1. Lift the seat cushion and pull safety cover out.
2. Wrap the velcro straps around the tray belt. (Located on the bottom of the Kids Tray.)
3. Fasten the velcro straps to secure.


Using and Adjusting the 5-Point Harness

CAUTION



Avoid serious injury from falling or sliding out. Always use harness.

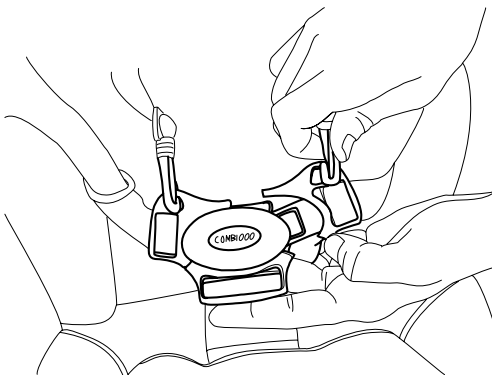

1. Place the crotch belt between the baby's legs.
2. Insert both waist belt buckles into the middle plastic piece.
3. Attach each shoulder strap's hook to the top of the waist belt clips.
4. To adjust the harness or waist belt, loosen the slack on both sides of each buckle

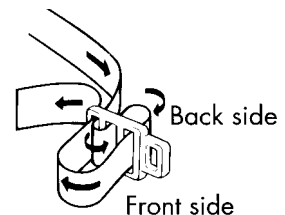

Adjusting the Footrest

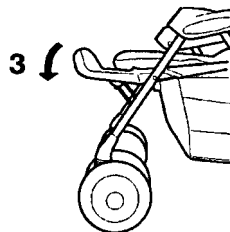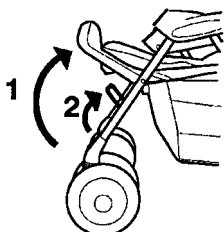

1. Lift the footrest up.
2. Rotate the adjustable bar to the up position.
3. Rest the footrest on the adjustable bar.

Folding the Stroller



1. Raise the backrest to the upright position.
2. Lock both front swivel wheels. Make sure the footrest is down.
3. Fold the canopy by lifting up on the canopy levers.
4. Make sure the carrier attachment straps are tucked behind the seat cushion.

CAUTION

Before folding, remove all items from the basket and store the safety cover under the seat cushion.




Folding Levers are located below the handle adjuster buttons on each side of the handle.

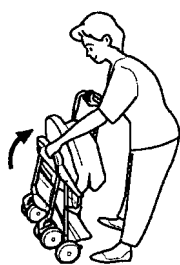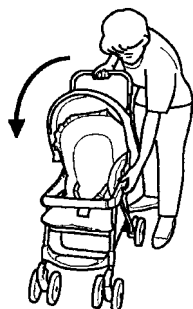


5. Pull up the folding levers until a click is heard.

6. Grasp the armrest and handle in opposite hands and fold together.

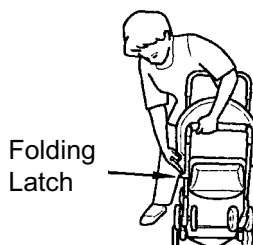

7. Engage the fold latch on the side of the stroller.

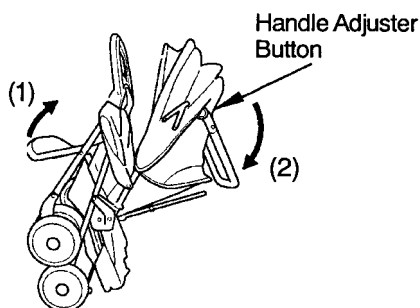

8. (1) Raise the footrest.
(2) Rotate the handle to fold position.

Note:

The stroller is self-standing. The plastic piece located on the basket rim is provided to support the stroller.

Removing/Attaching the Seat Cushion

Removing

1. Unbuckle the 5-point harness and pull all the straps through the seat cushion.
2. Grasp the seat cushion at the top and unfasten from the velcro.

Attaching

1. Pass the 5-point harness straps through the appropriate locations in the seat cushion.
2. Fasten the velcro.

CAUTION

If seat cushion is ripped or torn, do not use.

Do not use the stroller without the seat cushion.

Using the Perfect Match™ Guardrail & Carrier Attachment Strap

The following current brands and models can be used with the Perfect Match™ Guardrail.

Graco®: Snug Rider®, Snug Rider DX5®

Century®: Smart fit - Supreme®, Assura®, Smart Fit Plus 22®, Smart Fit Plus 22V®, Smart Fit Elite®, Avanta SE®, Avanta DX®

Evenflo®: On My Way®, On My Way Position Right®, On My Way Position Right V®

Cosco®: Opus 35™

Trade name and trademarks of Graco®, Century®, Evenflo® and Cosco® are the property of their respective owners and no endorsement of or approval by them is intended or implied. All COMBI® Perfect Match™ strollers are compatible with all of the Graco®, Century®, and Evenflo® infant car seat/carrier models and the Cosco® Opus 35 as of the date this printing was prepared.

Copyright October 2001 COMBI International Corp.

WARNING


-  When infant car seat/carrier is in the stroller, always fasten the Carrier Attachment Straps.
-  If unable to firmly attach Perfect Match™ Guardrail (as per instructions), discontinue use and contact COMBI Customer Service.
-  The Perfect Match™ Guardrail is only to be used when attaching infant car seat/carriers. Do not use for any other purpose.
-  Do not lean on or hang things from the Perfect Match™ Guardrail.
-  To assure safety for the baby, please refer to the manufacturer's instructions for use of your infant car seat/carrier.
-  When not being used with an infant car seat/carrier, please attach and use the Kids Tray.
-  If unable to securely attach infant car seat/carrier using the Perfect Match™ Guardrail, discontinue use and contact COMBI Customer Service.
-  Do not lift stroller by using infant car seat/carrier handle.
-  Discontinue use if fraying or damage is noted to Carrier Attachment Strap.

Using the Guardrail

CAUTION



Pull on each side of Perfect Match™ Guardrail to make sure that it is completely attached.

Perfect Match Guardrail

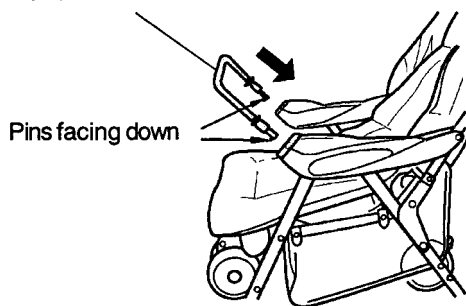

1. Remove Kids Tray and attach Perfect Match™ Guardrail being careful to position the Perfect Match™ Guardrail with the labels facing up.

Keep Positioning Rings toward the ends of the guardrail.

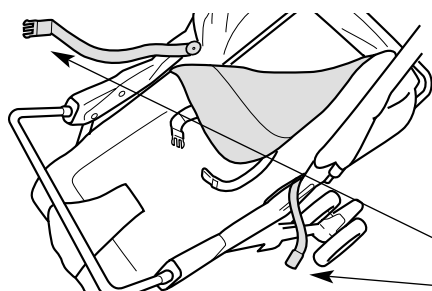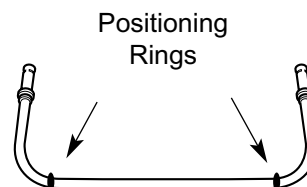


2. Recline the backrest to the middle position. Pull the Carrier Attachment Straps from behind the seat cushion and lay them over the armrests.

Note:

When using the Evenflo® infant car seat/carrier it may be necessary to leave the backrest in the up-right position to provide the proper recline angle on the infant seat/carrier.

Carrier Attachment Straps

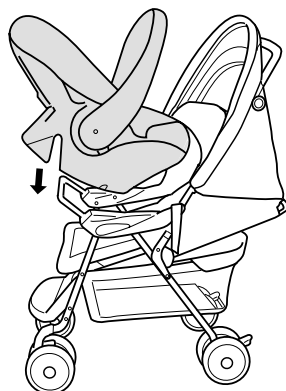

3. Hook carrier over the Perfect Match™ Guardrail and rotate until the infant car seat/carrier is solidly against the stroller.

Push the Positioning Rings snugly against the each side of the car seat/carrier.



4. Bring the Carrier Attachment Straps through the slots in the infant car seat/carrier and fasten the buckle. (If the strap is the incorrect length, adjust as needed. To adjust, thread fabric through each side of the buckle.)

To remove individual sides of the guardrail:



1. Remove the infant car seat/carrier by reversing the above steps.
2. Press the buttons on the underside of the armrest (as shown) while pulling on the guardrail to remove.

The trade name and trademarks of Graco®, Century®, Evenflo and Cosco® are the property of their respective owners, and no endorsement of or approval by them is intended or implied. All COMBI Perfect Match™ strollers are compatible with all of these manufacturer's infant car seat/carrier models as of the date this publication was prepared. Also compatible with Cosco® Opus 35 infant car seat/carrier.

Copyright October 2001 COMBI International Corp.

Using the Infant Car Seat Cover and Canopy Cover

! WARNING


Before using the infant car seat cover, please read and follow instructions from the infant car seat maker for safe use of your infant car seat.

CAUTION



Please read and follow instructions from the infant car seat maker for safe use of your infant car seat.

Place the provided seat cover over the seat cover in your infant car seat. Do not remove the original seat cover.

ATTACHING THE INFANT CAR SEAT COVER

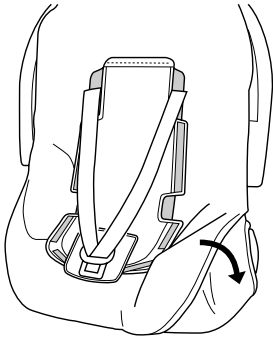

1. Unbuckle the safety straps on the infant car seat and place the seat cover on it with the sewn portion of the fabric flap to the top.
2. Lift up the flap, pull the belts out. Feed the flap through the belts and fasten the flaps using the velcro strips.
3. Place the elastic fastening strap at the bottom of the cover, underneath the handle and around back of infant car seat/carrier to hold the seat cover in place.

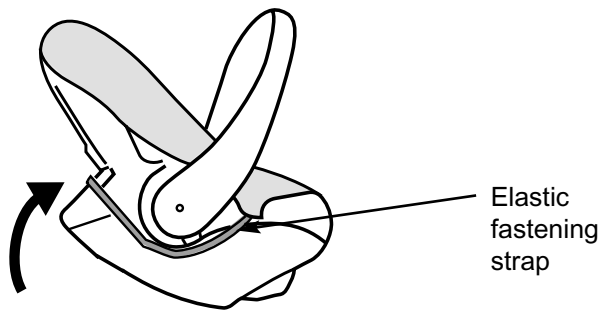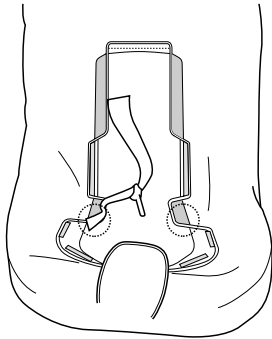


REMOVING THE INFANT CAR SEAT COVER


Release the elastic fastening strap from the carrier and remove the seat cover.

ATTACHING THE INFANT CAR SEAT CANOPY

Note: The infant car/seat carrier canopy can be used with or without the original infant car/seat carrier canopy.

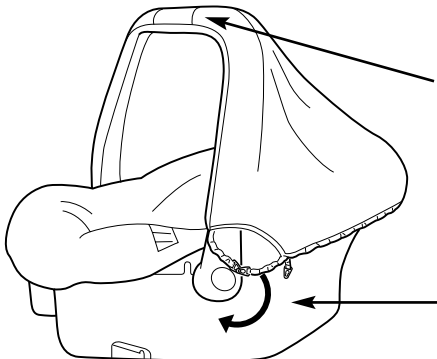

1. Place the canopy cover over the handle of the infant car seat/carrier. The top of the handle should show through the small cut out in the cover.
2. Pull the elastic straps around and underneath the bottom of the handle.

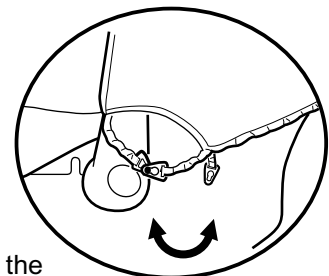

3. Clip the front and back elastic straps together to secure the canopy.

REMOVING THE INFANT CAR SEAT CANOPY

Unclip the elastic straps and pull the canopy off the infant car/seat carrier.

Routine Maintenance

STORE IN A COOL AND DRY AREA, especially in the summer. Do not store the stroller in the trunk of a vehicle.

SEAT CUSHION & INFANT CAR SEAT COVER/CANOPY

The seat cushion is machine washable. Set to gentle cycle using warm water and a mild detergent. Do not use bleach. Lay seat cushion and canopy and car seat covers flat to dry in shaded area. Do not machine dry. To prevent color fading, do not leave soaking for a long period. If the seat cushion is frayed or unraveling, discontinue use and call customer service for further instruction.

CANOPY, SEAT BELT, FIXED SEAT BASE AND BASKET

Hand wash with brush. Wipe out excess water with a dry cloth and dry in a shaded area. For stubborn dirt, dilute a mild detergent then apply directly to the dirty area. Wipe out the detergent.

MAIN BODY

Briskly wipe off any mud and dirt. To clean the body, wipe with a damp cloth then wipe out any traces of moisture on the body with a dry cloth. The main body might become moldy and musty if not wiped dry.


Excessive exposure to the sun could cause premature color fading of stroller plastic and fabric.

SWIVEL WHEELS

After prolonged normal use, the wheels of your stroller may not swivel as easily as when the stroller was new. This is usually due to a buildup of dirt in the swivel mechanism. Before adding lubrication, remove the swivel wheel by unfastening the clip and wipe off mud and dirt. **Do not use soap and water to wash wheels.**

ADDING LUBRICANT

Avoid lubricating the swivel wheels whenever possible. Excessive lubrication or adding lubricant to swivel wheels when new may cause them to develop a shimmy or wobble that may quicken their deterioration. Add a small amount of lubricant (silicone*) to the swivel shaft.

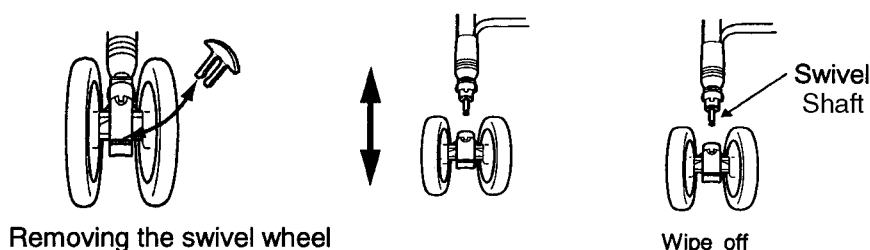

Do not use cooking oil or WD-40 because oil attracts dust and would hinder the movement rather than improve it.

*Compressed air and silicone spray are available in varying size cans at most hardware stores.

Trouble Shooting

STROLLER WON'T FOLD


- Check to see that the seat belt is not caught in the side.
- Make sure front swivels are locked.
- Remove all items from the basket.
- Make sure the seat back is in the upright position.
- Remove player from the back pocket of the canopy.

DIFFICULT TO STEER/STROLLER PULLS TO ONE SIDE

- Remove any items hanging from the handle.
- Make sure weight in basket is distributed evenly.
- Check that the brakes are not in the locked position.
- Clean wheels and lubricate if necessary.

DIFFICULT TO GET UP CURBS

- Pulling stroller backward makes going up a curb difficult, and could pose a safety hazard. Pull the handle up to lift the rear wheels onto the curb, then pull the stroller backward until the front wheels clear.

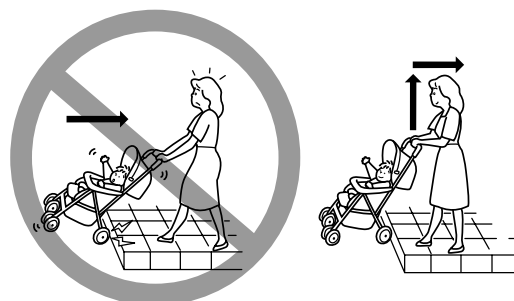

We have moved - Effective 2/7/04

Combi

Combi USA, Inc.

1962 Hwy 160 W, Ste. 100
Fort Mill, SC 29708

1-800-99-COMBI M-F 8:30am-5pm EST
803-548-3663 FAX

New SC
Sales Tax
is 5%

Parts
Form

Perfect Match™ 6630 Series

Acoustic Canopy

Patent Pending

COMBI

If you would like to place an order for the following parts, please fill out the form below and return it to the following address:

~~COMBI International Corporation
Attn: Customer Service Department
189-199 Easy Street
Carol Stream, IL 60188~~

or ~~Fax this completed form to us at
630-871-0606~~

IMPORTANT: We must have this information to process your order:

Model Number: 6630 - _____ Color & Pattern of Fabric: _____

Located on the rear right leg.

Parts List for the Perfect Match™ 6630 Series.

	Price	Quantity	Total
1. Canopy	\$ 30.00		
2. Basket (Fabric only)	20.00		
3. Seat Cushion	20.00		
4. Kids Tray	15.00		
5. Perfect Match™ Guardrail	10.00		
6. Folding Latch	5.00		
7. Parent's Tray	15.00		
8. Infant Car Seat Cover	12.00		
9. Infant Car Seat Canopy Cover	8.00		
10. Front Wheel Assemblies	18.00		
11. Acoustic Canopy Speaker Set	10.00		
	Amount of Order		
	Sales Tax (7.25%) (IL residents only)		
	Total		

If you need to order other parts for your stroller, please call us toll-free at 1-800-992-6624.

Shipping and Handling Fees: Add \$8.00 for orders \$34.99 and under. Add \$13.00 for orders \$35.00 and over. Note: Additional shipping charges will apply outside of the Continental U.S. Combi USA reserves the right to change pricing at any time.

Ship To:

Customer Name

Street Address

Street Address

City, State, Zip

Telephone Number

☐ **Charge to my credit card:**

☐ VISA

☐ MASTERCARD

☐ AMERICAN EXPRESS

☐ DISCOVER

Card Number

Expiration Date

-

Cardholder's Signature

☐ **Check enclosed**

9/5/2003